

Personal Alarms & Security Products



The *Walk Easy*
'BRIGHT KNIGHT'
PERSONAL STROBE ALARM
with Siren, Strobe Lamp and Torch

Product Code: 5-675

* High output Audio
Siren. 137dB(a)

* Flashing Strobe Light

* Torch facility



* 100% tested prior
to despatch

* Small, compact &
lightweight

* Belt or pocket clip

The 5-675 small and compact, multi-functional Personal Strobe Alarm from Walk Easy, with a very loud audio siren and flashing strobe light (to disorientate an attacker and attract attention) together with a torch facility. The Personal Strobe Alarm is activated by a ripcord and comes with a back clip for easy attachment to a belt or pocket. The Torch facility is activated by a push button on the side of the alarm.

The alarm measures approximately 78mm x 57mm x 30mm (3 x 2¹/₄ x 1 inch) and weighs 92gms (3¹/₄ ozs). The robust ABS Plastic alarm housing has a silver metallic finish. The Personal Strobe Alarm is supplied ready for immediate use with a fitted 9 volt battery, and all our alarms are 100% checked prior to despatch from our factory in Cambridge. The alarm complies with EC Council Directive 89/336/EEC (UK Regulations S.I. 1992/2372) and Directive 92/31/EEC.

See reverse for further details

Complete with a 9 volt fitted battery and a back clip to enable the alarm to be clipped to a belt or pocket, the *Walk Easy 5-675 BRIGHT KNIGHT Personal Strobe Alarm* caters for all personal emergency and distress situations. Just pull the ripcord for an ear piercing siren alarm audible up to 1/4 mile away, together with a flashing strobe lamp. Alternatively use the switch on the side to activate the Torch facility without the siren alarm. Police and security advisors recommend the use of Personal Alarms to minimise the threat of assault, rape, mugging, animal attack or obscene phone calls.

Warning

The effectiveness of the *Walk Easy Personal Strobe Alarm* is in part due to its extremely loud and powerful siren, which produces 137 decibels of sound at source (125 decibels is the normal pain threshold of human hearing). As a result, prolonged exposure can cause permanent hearing damage.


DO NOT ACTIVATE THE ALARM UNNECESSARILY.

In particular take care to avoid endangering small children and pets. The manufacturer and its agents will not accept any responsibility for any loss, damage or personal injury sustained while in possession of this product whatever the cause or reason.



TO CHANGE THE BATTERY IN YOUR WALK EASY BRIGHT KNIGHT PERSONAL STROBE ALARM

1. Remove the two Phillips screws A and B in the back of the alarm.
2. Remove the back cover and replace the 9 volt heavy duty battery ensuring that the new battery is inserted correctly.
NOTE: Incorrect insertion of the battery will prevent your alarm from working properly and may damage the alarm.
3. Replace back cover and insert and re-tighten the 2 Phillips screws.
4. Always test the alarm after changing the battery.

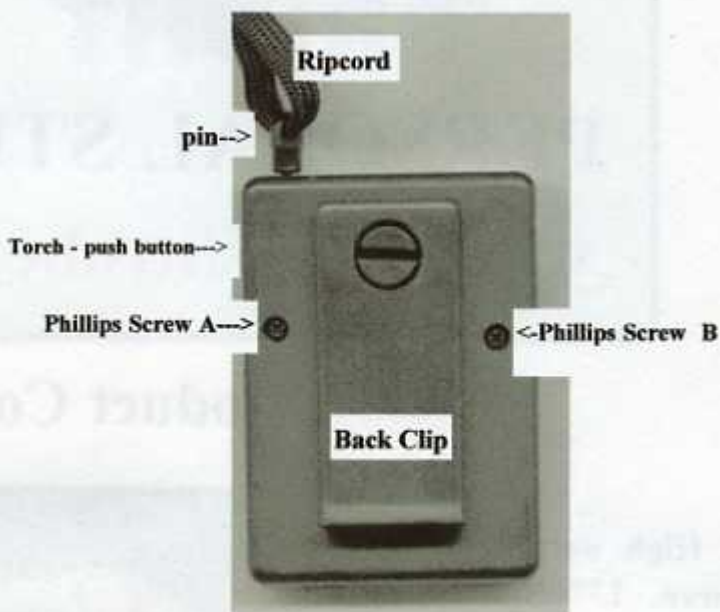

POWER SUPPLY

To ensure that your alarm is always at the peak of efficiency please check the battery's condition regularly by activating the alarm for a short period. At the first sign of a weak sound, replace the battery with a new 9 volt heavy duty battery (PP3 or equivalent).

Manufactured in a quality system approved to BS5750 Part 11 (EN ISO 9002).

SUGGESTIONS FOR USE

The *Walk Easy BRIGHT KNIGHT Personal Strobe alarm* can be held simply in your hand with the cord slipped around your wrist. Alternatively, it is fitted with a clip on the rear of the alarm which can be used to attach to a belt, pocket or waistband for personal security protection, or to a handbag or other item of luggage for protection against theft.

The alarm can be used in two separate modes.

a) Strobe Lamp and Siren together.

b) Torch

The alarm case is manufactured from virtually indestructible ABS plastic. The approximate size of the alarm is 78mm x 57mm x 30mm (3 x 2 1/4 x 1 inch) including the clip, and the weight approx. 92 gms (3 1/4 oz.) with a push button switch on the side to activate the torch only, and a locking pin at the end of a ripcord (pulling the cord releases the pin and activates both the strobe lamp and the audio siren).

INSTRUCTIONS

To operate your *Walk Easy Personal Strobe Alarm*: simply pull the ripcord to remove the pin. The alarm, both siren and strobe lamp will be activated immediately the pin is removed and will only stop when it is replaced. To use the torch simply operate the push button switch on the side of the alarm. Your 5-675 Personal Strobe Alarm will run for up to 2 hours in the combined strobe and siren mode on a fresh battery and up to 4 hours in the Torch only mode.

Walk Easy Limited, Unit 3, Hadstock Road Industrial Estate, Linton, Cambridge. CB1 6NR England.
Telephone: (+44) (0)1223 892623 Fax: (+44) (0)1223 893880
E-Mail: walkeasy@walkeasy.ltd.uk website: www.walkeasy.ltd.uk

See reverse of page for further details