


TRIGGA

by
WALK EASY



Stylish
and
Affordable

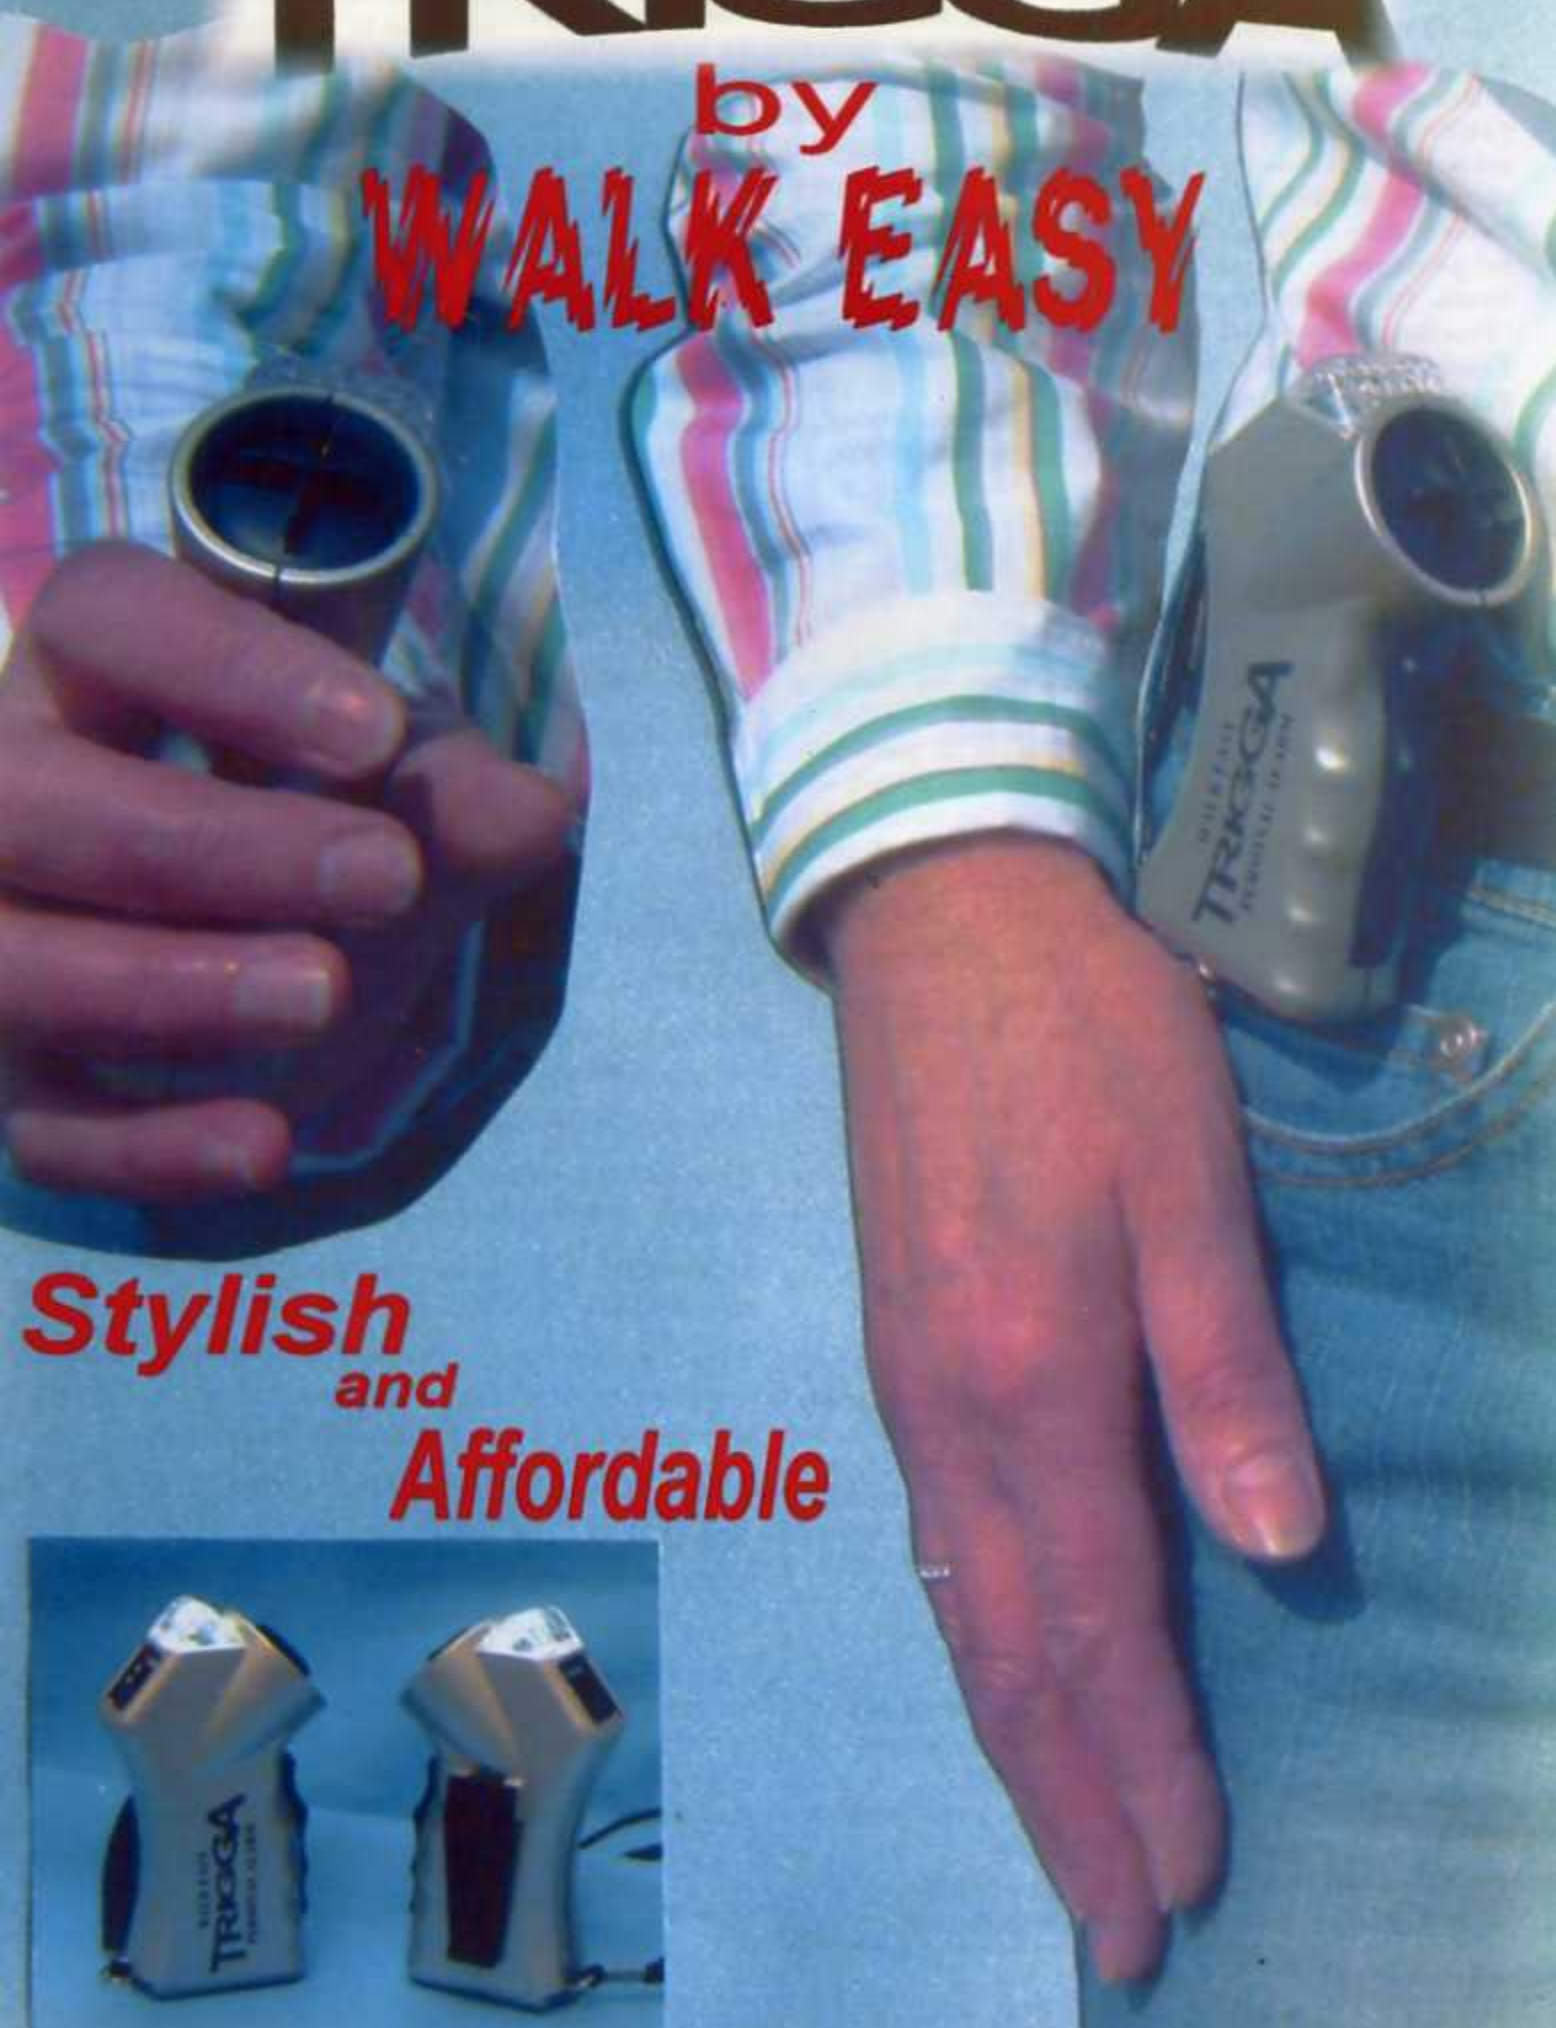

TRIGGA PERSONAL STROBE ALARM WITH TORCH FACILITY

The TRIGGA (product code 15-888) is an imaginatively designed Personal Attack Alarm designed by Walk Easy. Following detailed analysis of assaults, including rapes and muggings, published in Police and Home Office statistics and reported by newspapers, we agree with the Home Office recommendation (in "Practical Ways to Cut Crime - The Family Guide") for women to obtain a Personal Alarm. The TRIGGA is compact, ergonomically designed, and fits comfortably and inconspicuously into the hand. It is pre-set with a

simple three-position switch, with the following available settings: A: conventional trigger operation; B: off; and C: torch facility. (see inset view on the right). When switched to position A, squeezing the large and user-friendly trigger activates the TRIGGA'S 138 decibel penetrating siren and high intensity blue/white flashing LED light to disorientate an attacker and attract attention. To de-activate the alarm, return the selector switch to position B. There is a cruciform over the sound outlet designed to prevent an aggressor from easily muting the siren and has a rugged ABS casing to ensure that the alarm continues to operate if it falls or is thrown to the ground. The alarm is powered by a 9 volt heavy duty PP3

battery (readily available) and a flashing red light indicates when the battery needs replacing.

The TRIGGA has a torch facility and when not in use can be carried by its wrist cord or attached to a belt, pocket or clothing using the built-in clip.



OPERATING INSTRUCTIONS

When in a non-dangerous situation such as inside a supermarket, use the side clip to attach the TRIGGA to your belt, pocket or clothing. When in a potentially dangerous situation, (street, park, underpass, car park etc) carry the alarm in your hand with the facility switch set to Position A. In this configuration the 138 decibel audio 'wailing' siren and high intensity LED flashing strobe light can be operated manually by depressing the alarm trigger.

When the alarm is operated with the facility switch set to position A or position C, if the red 'LOW-BAT' light above the facility switch flashes, this advises you that the battery is low and needs to be replaced.

To fully test the 138 decibel audio 'wailing' siren and the high intensity LED flashing strobe light, set the facility switch to position A and squeeze the trigger. The siren and flashing LED will then operate until the facility switch is reset to position B, when the alarm will switch off within 1/2 second. To utilise the torch facility set the facility switch to position C and the blue/white LED will illuminate.

GUARANTEE: The Walk Easy TRIGGA Personal Alarm, excluding battery, is guaranteed against defects in materials and workmanship in normal use for a period of one year from the date of purchase. This guarantee is only valid if the alarm has not been altered, modified or repaired by anyone other than the manufacturer, and is invalidated where a replacement battery has been incorrectly fitted. This guarantee does not affect your statutory rights.

WALK EASY LTD

Unit 3, Hadstock Road Industrial Estate

Linton, Cambridge CB1 6NR England

Telephone UK : 01223 892623

Telephone International: +44-1223-892623

Fax: 01223 893880

E-Mail: sales@walkeasy.ltd.uk

Website: www.walkeasy.ltd.uk

TRIGGA SPECIFICATION

Alarm Housing: extremely rugged ABS plastic case.

Audio Siren Sound Output: 138 dBs

Strobe Light/Torch Output: blue/white LED

Battery: 9 volt heavy duty battery (PP3 or equivalent)

Dimensions: 102mm x 56mm x 26mm excluding clip

Weight (including battery): 90 gms

Muting: cruciform over the sounder output to obviate muting of the audio siren.

Clip: belt or pocket clip on the side of the alarm.

'Low Battery Light': if red light flashes when alarm is operated it indicates that battery needs replacing.

Retaining Cord: to slip over your wrist when in a safe situation such as inside a supermarket.

Duration: the alarm will operate for up to 2 hours in the combined strobe and siren mode on a fresh battery, and up to 24 hours in the torch mode.

UK Design Registration: 3012569

TO CHANGE THE BATTERY IN YOUR WALK EASY TRIGGA PERSONAL ALARM

1. Undo the Phillips screw in the base of the alarm.
2. Lift the base cover on its hinge and replace the 9 volt heavy duty PP3 battery ensuring that the new battery is inserted correctly.

NOTE: Incorrect insertion of the battery will prevent your alarm from working properly and may damage the alarm.

3. Refit the base cover and re-tighten the Phillips screw.
4. Always test the alarm after changing the battery.