


# WRIST-MATE PERSONAL ALARM

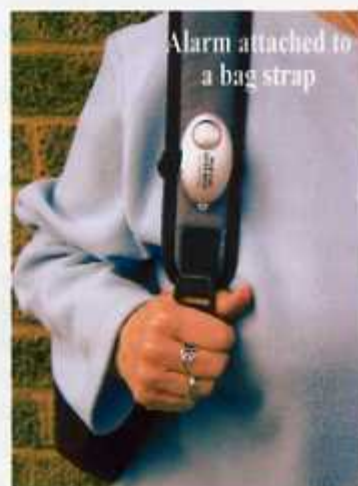

**WALK EASY®**

**See reverse for details**

# WRIST-MATE

**The mini personal alarm with maxi performance from WALK EASY**

**Either strap to your wrist, your cycle handlebars, your walking stick, your bag or your rucksack, or attach the alarm to your Keys for a potent defence against an aggressor**

Designed by the experts at *WALK EASY*, the WRIST-MATE is a small and inconspicuous personal alarm that can be secured around your wrist (like a watch) with the quick fastening wrist strap (supplied), or alternatively (without the strap) simply attach the alarm to your Key-Ring with the split-ring provided. The powerful siren (130dBs) is easily activated by a side switch on the alarm. The strap can be threaded through the loops on rear of the alarm so the alarm is worn either across the wrist or alternatively in line with wrist. Utilising the strap provided, the alarm can be attached to a bicycle or mobility scooter handlebars, to a bag or rucksack, to an umbrella handle and to a walking stick.

## SPECIFICATION

Alarm Housing: extremely rugged ABS plastic case.

Audio Siren Sound Output: 130 dBs

Battery: 3 batteries type LR44H

Dimensions: 65mm long x 38mm wide x 20mm high. Weight (including batteries): 20gms

Strap: self adhering strap, 15mm wide x 240mm long (can be trimmed to a shorter length by the user with knife or scissors if required).

Duration (with new batteries): will operate continuously for up to 30 minutes.

Split-Ring size: approx 20mm diameter

The Walk Easy WRIST-MATE mini-electronic Personal Alarm has a powerful 130dB audio siren which is activated by the slide switch recessed at one side of the alarm. When the switch is moved to the 'on' position, the alarm will operate continuously until the switch is physically moved back to the off position. The Alarm has a split-ring to enable attachment to your key-ring, however by removing the ring from the alarm and then slipping the touch fastening strap (supplied separately inside the pack) through two of the slots on the reverse side of the Alarm and then securing the strap around your wrist, the alarm can be converted to a Wrist Alarm, which is particularly useful for walkers and joggers etc or for anyone who wishes to have protection while keeping their hands free when out and about.

**WARNING** *Prolonged exposure to the siren can cause permanent hearing damage.*

*\* Never activate the alarm unnecessarily. \* Use the alarm only in an emergency.*

*\* Do not activate the alarm in the presence of children or pets. \* Keep the alarm out of reach of children.*

Check your alarm regularly and at the first sign of the sound becoming weaker replace the batteries.

## TO CHANGE THE BATTERIES IN YOUR WALK EASY WRIST-MATE PERSONAL ALARM

1. Unscrew the x3 Phillips screws in the back of the alarm.
2. Lift the back cover and replace the x3 old 'button cell' batteries (shown in Figure.1) with x3 new batteries (type LR44H) ensuring that the new batteries are inserted correctly.

NOTE: Incorrect insertion of the batteries will prevent your alarm from working properly and may damage the alarm.

3. Refit the back cover and insert and re-tighten the Phillips screws.

4. Always test the alarm after changing the batteries.

**GUARANTEE:** *The Walk Easy Wrist-Mate Personal Alarm, excluding batteries, is guaranteed against defects in materials and workmanship in normal use for a period of one year from the date of purchase. This guarantee is only valid if the alarm has not been altered, modified or repaired by anyone other than the manufacturer, and is invalidated where replacement batteries have been incorrectly fitted. This guarantee does not affect your statutory rights.*

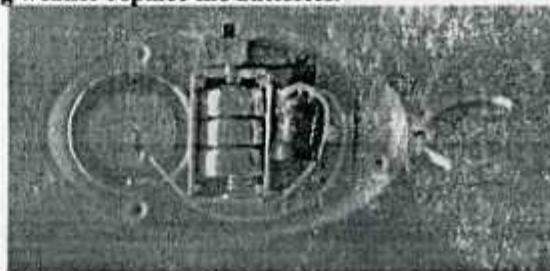


Figure.1

## WALK EASY LTD

Unit 3, Hadstock Road Industrial Estate  
Linton, Cambridge CB1 6NR England

Telephone UK : 01223 892623 Telephone International: +44-1223-892623 Fax: 01223 893880

E-Mail: [sales@walkeasy.ltd.uk](mailto:sales@walkeasy.ltd.uk)

website: [www.walkeasy.ltd.uk](http://www.walkeasy.ltd.uk)